TLS-450 Series Consoles

Module Replacement Instructions



Notice

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.

Veeder-Root reserves the right to change system options or features, or the information contained in this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be photocopied, reproduced, or translated to another language without the prior written consent of Veeder-Root.

Contact TLS Systems Technical Support for additional troubleshooting information at 800-323-1799.

DAMAGE CLAIMS / LOST EQUIPMENT

Thoroughly examine all components and units as soon as they are received. If any cartons are damaged or missing, write a complete and detailed description of the damage or shortage on the face of the freight bill. The carrier's agent must verify the inspection and sign the description. Refuse only the damaged product, not the entire shipment.

Veeder-Root must be notified of any damages and/or shortages within 30 days of receipt of the shipment, as stated in our Terms and Conditions.

VEEDER-ROOT'S PREFERRED CARRIER

- Contact Veeder-Root Customer Service at 800-873-3313 with the specific part numbers and quantities that were missing or received damaged.
- 2. Fax signed Bill of Lading (BOL) to Veeder-Root Customer Service at 800-234-5350.
- 3. Veeder-Root will file the claim with the carrier and replace the damaged/missing product at no charge to the customer. Customer Service will work with production facility to have the replacement product shipped as soon as possible.

CUSTOMER'S PREFERRED CARRIER

- 1. It is the customer's responsibility to file a claim with their carrier.
- 2. Customer may submit a replacement purchase order. Customer is responsible for all charges and freight associated with replacement order. Customer Service will work with production facility to have the replacement product shipped as soon as possible.
- 3. If "lost" equipment is delivered at a later date and is not needed, Veeder-Root will allow a Return to Stock without a restocking fee.
- 4. Veeder-Root will NOT be responsible for any compensation when a customer chooses their own carrier.

RETURN SHIPPING

For the parts return procedure, please follow the appropriate instructions in the "General Returned Goods Policy" pages in the "Policies and Literature" section of the Veeder-Root **North American Environmental Products** price list, Veeder-Root will not accept any return product without a Return Goods Authorization (RGA) number clearly printed on the outside of the package.

©Veeder-Root 2015. All rights reserved.

	Introduction		
		uals	
		ertification Requirements	
		Begin	
		utions	
	Precautions /	Against Static Electricity	3
	Before Turnir	ng Off Power	4
	Console Mod	ule Locations	
		nm Modules	8
	Installation		
		moving an Interface Module	9
	-	SM Module(s)	
	-	Position	
	Connec	ctor Position	10
	Installing an I	I/O, MDIM or LVDIM Module(s)	11
		Position	
	Connec	ctor Position	11
	Installing a C	omm Module	11
	Use of Techn	icians Programming Kit (P/N 330020-634)	13
	Installing Sof	tware Features atures Installation Procedure	1.1
		rade Procedure	
		es Installed	
	verily i eatur	es installed	
Figures			
19	Figure 1.	USB/Ethernet board - V-R thumb drive ports	4
	Figure 2.	Accessing Diagnostic Main Screen from the Home Screen	
	Figure 3.	Software Maintenance button	
	Figure 4.	Initiating a System Backup	
	Figure 5.	TLS-450 console plug-in module bays	
	Figure 6.	Front doors	
	Figure 7.	Comm Module Bay	12
	Figure 8.	Inserting i-Button into USB Adapter	14
	Figure 9.	Locating Printer's USB connector	
	Figure 10.	Downloading Software Features from the USB Adapter	
	Figure 11.	Installing Software Features	17
	Figure 12.	About button	17
	Figure 13.	Verifying Installed Software Features	18
Tables			
iabics	Table 1.	Module Ray Modules	4
	Table 1.	Module Bay Modules Communication Bay Modules	
	Table 3.	Technician Programming Kit	
	Table 3.	Comm Module Permissible Slots and Port Availability	

Introduction

This manual contains procedures for installation or replacement of the following TLS-450 console modules:

Table 1. Module Bay Modules

Part No.	Item
332812-003	Universal 8 Sensor/Probe Interface Module
332812-002	Universal 12 Sensor/Probe Interface Module
332812-001	Universal 16 Sensor/Probe Interface Module
332813-001	Universal Input/Output Interface Module
332812-005	MDIM Module
332812-004	LVDIM Module
333564-001	10 Amp Controller Interface Module

Table 2. Communication Bay Modules

Part No.	Item
332818-001	SiteFax/Modem Single Port Module
332816-001	Ethernet Single Port Module
332817-001	USB Single Port Module
332913-001	USB/Ethernet Dual Port Module
332866-001	RS-232 Single Port Module (also used for EDIM or Satellite S-SAT or Satellite H-JBox Modules apps.)
332868-001	RS-232 Dual Port Module (also used for EDIM or Satellite S-SAT or Satellite H-JBox Modules apps.)
332867-001	RS-485 Single Port Module
332869-001	RS-485 Dual Port Module
333140-001	CDIM Module

Table 3. Technician Programming Kit

Part No.	Item
330020-634	One USB/Ethernet Dual Interface Module and Five Communication Module Blank Covers

The above parts are for the TLS system designed and manufactured by Veeder-Root. This manual assumes all preliminary site preparation is completed, and that field wiring from the console to the sensor junction box is in place.